

ARMOR ROD APPLICATOR

- Designed to facilitate application and removal of factory formed conductor ties and armor rods

CAT NO	DESCRIPTION	LBS
10-096	ARMOR ROD APPLICATOR	0.6



10-096

UNIVERSAL COTTER KEY INSTALLER-PULLER

- Used for 1/8 cotter keys in clevis pins of distribution hardware

CAT NO	DESCRIPTION	LBS
12425	UNIVERSAL COTTER KEY INSTALLER-PULLER	0.5



12425

UNIVERSAL COTTER KEY PULLER

- Used for removal of cotter keys on ball socket and clevis type suspension insulators and hardware
- Adjustable for compound angles

CAT NO	DESCRIPTION	LBS
5455-8	UNIVERSAL COTTER KEY PULLER	0.5



5455-8

UNIVERSAL COTTER KEY INSTALLER-PULLER

- Used for 3/16" cotter keys on clevis type fittings
- Spring loaded

CAT NO	DESCRIPTION	LBS
5455-21	UNIVERSAL COTTER KEY INSTALLER-PULLER	0.8



5455-21

UNIVERSAL NX FUSE PULLER DISCONNECT HEAD

- Used for removing and installing NX sand fuses on URD switch gear

CAT NO	DESCRIPTION	LBS
13489	UNIVERSAL NX FUSE PULLER DISCONNECT HEAD	0.3




13489

UNIVERSAL COTTER KEY PUSHER

- Used for transmission insulator strings
- Pushes legs on cotter key partially out of socket so ball can be disconnected
- Slot can face to either side or rear

CAT NO	DESCRIPTION	LBS
12737	UNIVERSAL COTTER KEY PUSHER	1.1

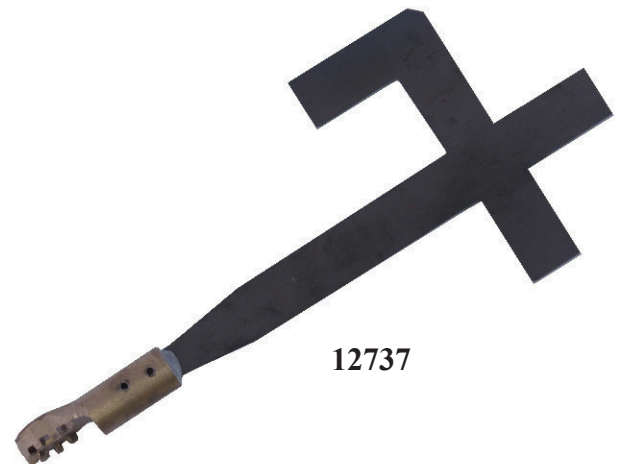

12737